

# PELTOR FL5000 ADAPTER RANGE

JUNE 2004

## STANDARD ADAPTERS

		<b>Cable</b>	<b>Length</b>	<b>Spare cable</b>	<b>Fig. No.</b>	<b>EXT/INT switch</b>
FL5001	Peltor standard	LC	0.7---2.1	AL5001	1	
FL5003	Dancall 6000, Tateco CTS900	LQ	0.6	AL5003	2	
FL5005	Ericsson Freeset	LQ	0.6	AL5004	3	
FL5006	Ground Mechanic	LC	3.0---6.0	AL5005	4	
FL5006 GB	Ground Mechanic Hi-Viz	LAU	3.0---6.0	AL5005	4	
FL5007	Ground Mechanic	LAL	1.5---6.5	AL5006	4	
FL5007 GB	Ground Mechanic Hi-Viz	LAV	1.5---6.5	AL5006	4	
FL5008	Ground Mechanic	LC	6.5	AL5007	4	
FL5008 GB	Ground Mechanic Hi-Viz	LAU	6.5	AL5007	4	
FL5010	Alinco. ICOM. Yaesu. Zodiac	LQ	0.6	AL5009	6	
FL5011	Dittel FSG4, FSG5	LAM	0.6	AL5010	7	
FL5013	Ascom SE-140	LR	0.6	AL5011	9	
FL5017	Motorola Visar	LQ	0.6	AL5015	13	
FL5019	Maxon Slim line. Motorola Expo	LC	0.6	AL5017	15	
FL5030	Motorola GP340	LQ	0.6	AL5013	11	Yes <sup>1)</sup>
FL5034	ICOM IC angled connector	LQ	0.8---1.9	AL5025	5	
FL5035	Kenwood TK3101 Funkey	Kenwood	0.7	AL5026	16	

## EEx (ATEX) APPROVED ADAPTERS

 II 2 G EEx ib IIC T4

 
		<b>Cable</b>	<b>Length</b>	<b>Spare cable</b>	<b>Fig. No.</b>	<b>EXT/INT switch</b>
FL5205	Tateco CTS900, Ericsson Freeset	LQ	0.6	-	2	
FL5212	Motorola MX1000. MX2000. MX3000	LAM	0.6	AL5018	8	Yes <sup>1)</sup>
FL5214	Motorola GP300. Radius P110	Motorola		AL5012	10	
FL5216	Ericsson P50/500	Ericsson		AL5014	12	Yes <sup>1)</sup>
FL5218	Motorola HT1000 MT2000 GP900	LAM	0.5---0.9	AL5016	14	Yes <sup>1)</sup>
FL5230	Motorola GP320 / Motorola 340	LQ	0.6	-	11	Yes <sup>1)</sup>

<sup>1)</sup> See Instructions for use.


# CONNECTOR CABLES TYPE DESIGNATION



1.

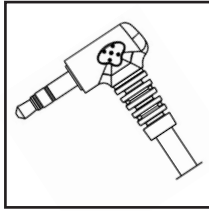

 
2.

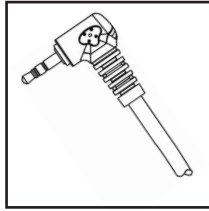


3.



 
4.

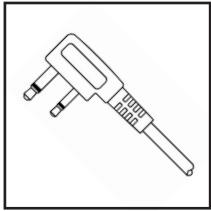

 
5.

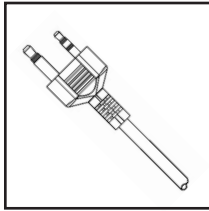

 
6.

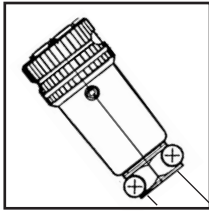

 
7.

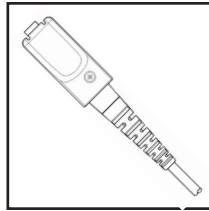

 
8.

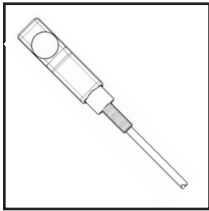

 
9.

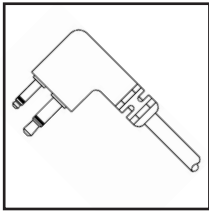

 
10.

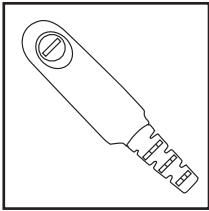

 
11.

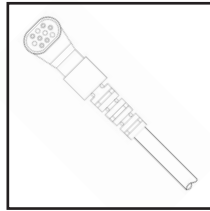

 
12.

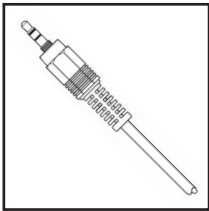

 
13.

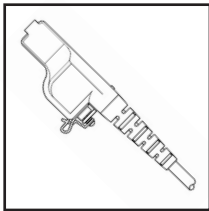

 14.

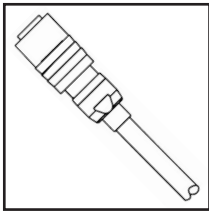

 15.

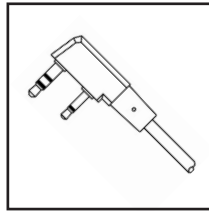

16.